






Rollstop Hinge replacement Size 50,60,65,70)
(Instructions for 7822 & 7823 hinge kits)

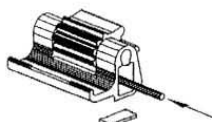


1. Open hatch fully to 180°
Use a suitable drift and mallet to break off plastic tab.

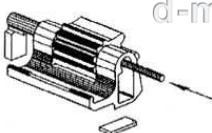

2. Drive out hinge pin with drift and mallet. Repeat with other hinges, and remove hatch upper. Clean the hinges removing all the old components.

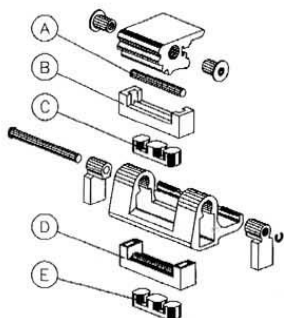

3. Note how the components are assembled, and that parts A,B,&C are replaced by two parts D&E. Assemble the buffer to the follower and put into the lower hinge. Push the two headed bushes into the upper hinge and the two sleeves into the ends of the lower hinge. Discard parts A,B&C.
NOTE USE:
Buffer painted green on bottom surface only with this kit
Vaseline should be applied to the follower and the cams on the upper hinge.

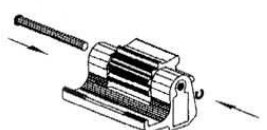

4. With the hatch upper in the fully open position, match the upper and lower hinges together. Insert the steel hinge pin through the hinge. Repeat with the other hinges.

Routine Maintenance

If excessive stiffness is experienced in opening or closing the hatch, the hinge must be cleaned and lubricated, otherwise damage to the hatch can occur. This maintenance will result in continued good performance from your hatch.

5. Push the small circlip onto the end of the steel hinge pin, ensuring it is properly located onto the groove of the pin. Two small screwdrivers are best for this. Repeat for the other hinges. Check the operation of the hatch.

